NREAQ1





# **LORUS**

### **HOW TO USE NON - CALENDAR MODEL**



Pull the crown OUT to the FIRST click and set the time. Then push the crown IN.

Note: When you set the time, first set the minute hand to a properly advanced time, return the minute hand to the correct time by turning it COUNTERCLOCKWISE

### **HOW TO USE DAY/DATE MODE!**

The day of the week can be displayed bilingually (English/another language) and you can select

### 1. How to set the day and date



Pull the out crown to the first click position. (The crown of this watch car be pulled out to the second click position.)



and set the previous day and date. (The day and date can be selected alternatively and displayed in English or the other language.) (For Cal. PC33, turn clockwise

to set the date only.)

Pull out the crown to the second click position and set the present day and date by turning the minute hand.

### Day setting for Cal. PC33 At the second click position, turn the hands

clockwise and counterclockwise repeatedly between 11:15 pm and 3:45 am to select the desired day and language. Note: Do not attempt to set the day and date

between the times of 9:00 pm and 4:00 am as this may cause the day and date displays to change out of sequence 2. How to set the time



crown to the second click position second the hand stops second The hand should be stopped on 12 o'clock Be sure to check that the AM/PM is correctly



set the desired time.



position accordance with a time signal.

- set. (The day and date are designed to change once every 24 hours.) To adjust the correct time for a quartz watch,
- It is necessary to advance the minute hand 4 or 5 minutes ahead of the correct time and then turn it counterclockwise to set the designated time. LUMIBRITE WATCH If your watch is a LORUS LUMIBRITE watch, it

has following features. LORUS LUMIBRITE watches absorb and store

light energy from natural and artificial light sources and emit light in the dark. They are made of environmentally friendly material, and therefore, are harmless to human beings and the environment. With a full charge, LORUS LUMIBRITE watches

glow in the dark hours longer than conventional luminous watches of this type. If exposed to a light of more than 500 lux (i.e., the brightness of a typical office) for approximately 10 prior than 500 lux (i.e., the brightness of a typical office).

mately 10 minutes, or direct sunlight for 2 minutes, they will glow for hours. Since LORUS LUMIBRITE watches emit the light they store, the brightness will decrease gradually over time. The length of time they will glow may also differ slightly depending on such factors as the brightness of and distance from the light source used to

charge the watch BATTERY CHANGE As the battery is inserted at the factory to check the function and performance of the

watch, its actual life once in your possession may be less than the specified period. Be sure to replace the battery to prevent any possible malfunction as soon as it runs down.



recharge it.

**CAUTION** 

To replace the batteries, we recommend taking the watch to a local watch repair

not expose the old battery to fire or

### **CARE OF YOUR LORUS WATCH**



### **WARNING**

Please note that there is a risk of serious consequences such as severe injury if the following safety regulations are not strictly

- Immediately stop wearing the watch in following cases.
  - If the watch body or band becomes edged by corrosion etc
  - If the pins protrude from the band.
  - \* Immediately consult the retailer from whom the watch was purchased or LORUS SERVICE NETWORK.
- Keep the watch and accessories of the reach of babies and children.
  - Care should be taken to prevent a baby or a child accidentally swallowing the accessories.
  - If a baby or child swallows the batter or accessories, immediately consult a doctor, as it will be harmful to the health of the baby or child.
  - DEATH or serious injury can occur if ingested.
  - A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.

### **WATER RESISTANT**

Condition of use	Accidental contact with water, such as splashes and rain	Swimming and taking a shower	Skin diving	Scuba diving
No Indication	NO	NO	NO	NO
WATER RESISTANT	YES	NO	NO	NO
WATER RESISTANT (50M/5 BAR)	YES	YES	NO	NO
WATER RESISTANT (100M/10 BAR) or above	YES	YES	YES	NO

If your watch is 200 M/20 BAR, 100 BAR or 50 M/5 BAR water resistant indicated on the dial/case back. 100 M/10



### CAUTION

- Do not operate the buttons when the atch is
- If the watch is exposed to salt water, rinse it in fresh water and then wipe
- Should you find any water or conden-sation inside the watch, immediately have it checked. Water can corrode electric parts inside the case.



### CAUTION

contains precise electronic components. Never attempt to open the or remove the back cover. **LEATHER BAND** 

- A leather band is susceptible discoloration and deterioration from moisture, sweat and direct sunlight.
  - Wipe off moisture and sweat as soon as possible by gently blotting them up with a dry cloth. Do not expose the watch to direct sunlight for a long time.
  - Please take care when watch with light-colored band, as dirt
  - is likely to show up.
  - Refrain from wearing a leather band watch other than Aqua Free bands while bathing, swimming, and when working with water even if the watch itself is water-resistant enforced for use (10-BAR/20-BAR

resistant). PLASTIC BAND

As for material characteristics, band is easily dirtied, and may be stained and discolored. Wipe off dirt with a wet cloth or cleaning tissue. Unlike bands of other materials, cracks

may result in the band being cut. Take

care not to damage the band with an edged tool. ALLERGIC REACTION Because the case and band touch directly, it is important to clean

# skin

regularly. If not, shirt sleeves may be stained and those with delicate skin may develop a rash. Please wear the watch with some play to avoid any possible allergic reaction. If you rash on your wrist, stop wearing

develop a rash on your and consult a physician. **MAGNETISM** Your watch will be adversely affected by strong magnetism. Keep it away from close contact with magnetic objects.

**SHOCKS AND VIBRATIONS** Your watch may be worn for normal sports activities, but be careful not to drop it or hit it on hard surfaces.

# **TEMPERATURE**

Your watch is preadjusted so that constant accuracy may be insured at temperature

CLEANING Use only a soft cloth and clean water for cleaning your watch. Never use chemicals,

# as the waterproof gasket will corrode.

ISERVICE When your LORUS watch requires repair of servicing, please see the enclosed WARRANTY,

# servicing, ple GUARANTEE.



- - Pry up the adjusting flap with a small screwdriver or something with a sharpened Slide the clasp to adjust it to a desired size. The grooves on the Back side of the bracelet should fit into the convex portion on the clasp, then, close the adjust flap.

# Wrong method

Pry up

If you do this way, the adjusting flap may be destroyed.



Printed in China